



Accessories


For AI Products

RFID Reader

Quick Reference Guide

1 Prepare the RFID reader for use

- 1 Charge the reader's battery using the included micro-USB cable.
- 2 Turn on both the reader and its Bluetooth by pressing and holding the on/off button.

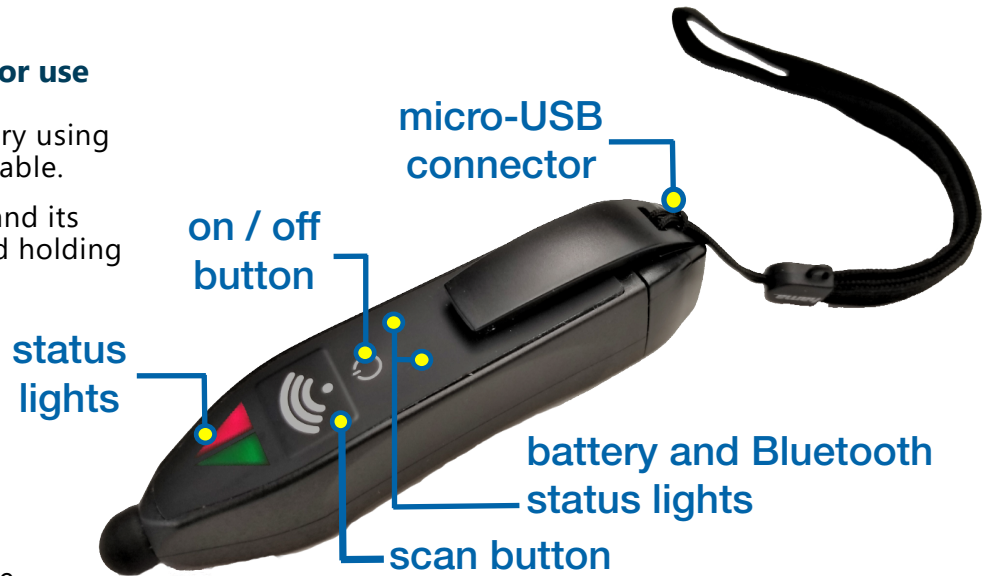

Once Bluetooth has been activated, a blue indicator light displays on the top of the reader, near the on/off button.


2 Connect with Allegro

- 1 In the Bluetooth COM application, tap **Discover Devices** and select **iID PENSolid**. Note the COM port used; you will need to select it in step 3.
- 2 Tap **Connect**.



3 Select COM Port in Allegro Periodic Survey Application

- 1 On the Allegro, open the Periodic Survey applications. Tap **View** and then **Options** and then the **RFID** tab.
- 2 Select **microsensys** from the list in the **Model** field.
- 3 Select the COM port that was assigned to the reader in step 2.
- 4 Refer to the *Allegro User Guide* for more information on using the RFID reader and assigning RFID tags to a site.

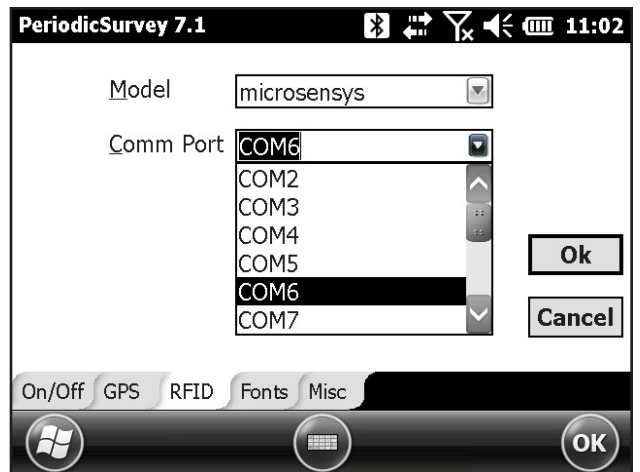

For additional assistance, contact the American Innovations Technical Support team at support@aiworldwide.com or 512-249-3400 (toll-free: 800-229-3404).